

Hotel Amarilis ^{☆☆☆}



DOBRAugostiteljski obrt, Vinski Vrh 68c, Netretić, OIB:02232996643

IBAN: 2923600001102074466

tel: +385 47 874006, +385 47 874208, +38591 610 2277

hotel.amarilis@gmail.com

INSTRUCTIONS FOR AIR CONDITIONER USE

1. TURN ON air conditioner by directing a remote control to the device and pressing red button 
2. HEAT/COOL choose a heat funkcion by pressing the yellow button on the remote control. Wait for approx. 5 min for a device to change the function if it was set on some other funkcion. Choose a cool function by pressing blue button. Wait for approx. 5 minutes that the device starts to cool if it was set on some other function.
3. BLOW DIRECTION choose a direction of an air blowing from the air conditioner with the SWING buttons on the center of the remote control. Use of the „SWING ▲ ▼“ button sets one of 5 blow directions from up to down. Using button „SWING ▶ ◀“ sets one of 5 blow directions from left to right.
4. FAN  pressing upper part of fan simbol on the central button of the remote control speeds up the fan blowing, pressing the lower part of a fan simbol it lowers down the fan speed.
5. TEMPERATURE SETTING press the button „Temp+“ for incrising the temperature or „Temp-“ to decrease the temperature
6. TURN OFF air conditioner by directing a remote control to the device and pressing red button 